



1590T1 OPL REPLACEMENT PARTS LIST


93200P † – CABINET ASSY

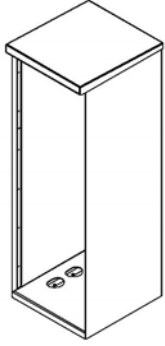


91121 † – PEDESTAL ASSY W/O HARDWARE ♦

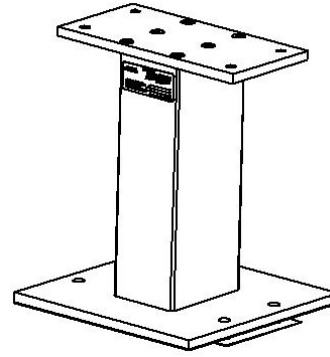


93205P † – MASTER LOAD DOOR FRAME ASSY




PH93202 – INSERT ASSY W/O HARDWARE ♣

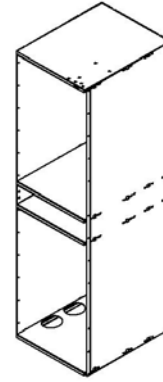


K93208SP † – PARCEL DOOR ASSY W/ OR W/O LOCK

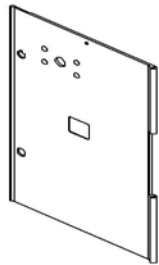


K92300 – HS ARROW LOCK PLATE W/HARDWARE

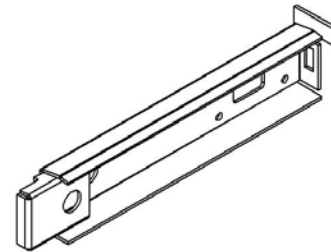


K91118SP † – POSTAL ACCESS DOOR ASSY

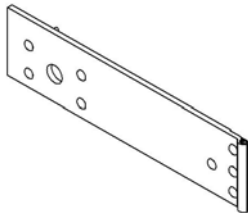


K91040 – HINGE PIN W/ HARDWARE

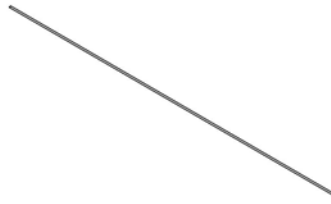


93410P † – BOTTOM BRACE ●

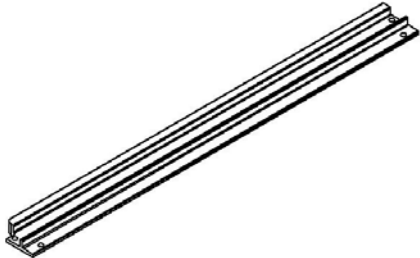

93409P † – TOP BRACE ●

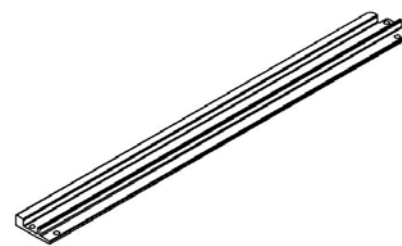

91053-3P † – RIGHT OUTER HINGE

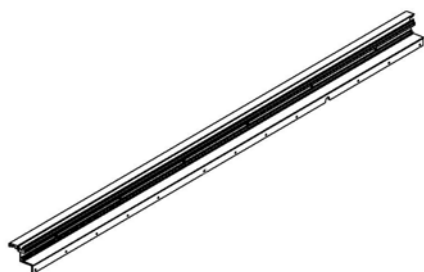


PH93203 † – LEFT OUTER & SLIDING LATCH ASSY ■




86431 – SPRING PARCEL RETURN W/O HARDWARE ▲



K91067 – HOLD OPEN ARM W/ HARDWARE

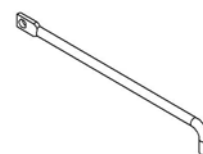

K91079 – FLOATING SHELF

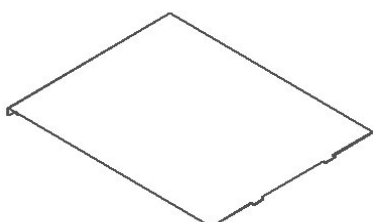

- † - SPECIFY FINISH (LISTED BELOW)
- ♦ - ADDITIONAL HARDWARE REQUIRED FOR INSTALLATION (INDICATED BELOW)
- ♣ - ADDITIONAL HARDWARE REQUIRED FOR INSTALLATION (INDICATED BELOW)
- ▲ - ADDITIONAL HARDWARE REQUIRED FOR INSTALLATION (INDICATED BELOW)
- - ADDITIONAL HARDWARE SUGGESTED FOR INSTALLATION (INDICATED BELOW)
- - ADDITIONAL HARDWARE SUGGESTED FOR INSTALLATION (INDICATED BELOW)

1590T1 OPL REPLACEMENT PARTS LIST

PART #	DESCRIPTION NAME PLATE
91511-1P	NUMBER PLATE- METAL ADHESIVE WITH BLACK NUMBERING -1P
91511-2P	NUMBER PLATE- METAL ADHESIVE WITH BLACK NUMBERING - 2P
91514	NUMBER PLATE- METAL ADHESIVE WITH BLACK NUMBERING – (SPECIFY # REQUIRED 3P-99P)
91514B	NUMBER PLATE- METAL ADHESIVE BLANK – NO NUMBERING
LOCKS, KEYS AND RELATED PARTS	
K91910	LOCK CYLINDER W/ CAM AND CLIP
91910B	LOCK CYLINDER LOCK BODY ONLY FOR K91910 LOCK W/O CAM, NUT OR CLIP
91512	KEY BLANK COMPX/NATIONAL WITH CODES 1000PS - 1999PS OR 3000PS - 3999PS
91513	KEY BLANK COMPX/NATIONAL WITH CODES 2000PS - 2999PS OR 4000OS - 4999PS
CK25750	CONVERSION KIT FOR POSTAL TO PRIVATE CONVERSION ON OPL FOR PARCEL AND POSTAL ACCESS DOORS
K63213-SS	STAINLESS STEEL PARCEL LOCK KIT – INCLUDES LOCK KIT, CAM KIT, AND COVER KIT
K64216-SS	STAINLESS STEEL PARCEL LOCK COVER KIT- W/O LOCK OR CAM
K64213-A	PARCEL LOCKER CAM KIT- W/O LOCK OR COVER
K86160	PARCEL LOCK KEY TAG KIT – INCLUDES 3 PLASTIC KEY TAG HOLDERS AND LABELS
K84993	MCGARD SCREWS FOR USPS INSTALLATION OF ARROW LOCKS ON PARCEL DOORS
TOUCHUP PAINT	
86710	TOUCH UP PAINT – PAINT PEN (POSTAL GREY FLAT)
86700	TOUCH UP PAINT- SPRAY CAN (POSTAL GREY FLAT)
K10010	TOUCH UP PAINT – PAINT PEN (SANDSTONE PEBBLE)
K10022	TOUCH UP PAINT- SPRAY CAN (SANDSTONE PEBBLE)
K10011	TOUCH UP PAINT – PAINT PEN (WHITE PEBBLE)
K10023	TOUCH UP PAINT- SPRAY CAN (WHITE PEBBLE)
K10008	TOUCH UP PAINT – PAINT PEN (DARK BRONZE PEBBLE)
K10020	TOUCH UP PAINT- SPRAY CAN (DARK BRONZE PEBBLE)
K10012	TOUCH UP PAINT – PAINT PEN (FOREST GREEN PEBBLE)
K10024	TOUCH UP PAINT- SPRAY CAN (FOREST GREEN PEBBLE)
K10006	TOUCH UP PAINT – PAINT PEN (BLACK PEBBLE)
K10018	TOUCH UP PAINT- SPRAY CAN (BLACK PEBBLE)
HARDWARE PARTS	
91175 ♦	ANCHOR BOLT KIT – TO CONNECT PEDESTAL STAND TO CONCRETE
K86101-F ♦	BOLT KIT- FOR INSTALLATION OF UNIT TO PEDESTAL
91123 ♣	SCREW 8-32 X .50" (USED TO INSTALL INSERT ASSEMBLY TO CABINET – USES 12 TOTAL)
91128 ▲	SCREW 8-32 x .375" (USED TO INSTALL PARCEL SPRING TO FRAME – USES 1 PER DOOR)
86092 ▲	NUT 8-32 (USED TO INSTALL PARCEL SPRING TO DOOR – USES 1 PER DOOR)
86229 ●	SCREW 8-32 X .75" (USED TO INSTALL THE TOP OR BOTTOM BRACE – USES 4 PER BRACE)
86098 ■	RIVET 1/8" (USED TO INSTALL HINGE AND SLIDE HOUSING TO INSERT ASSY – USES 24 TOTAL)
OTHER HARDWARE NOT SHOWN	
91063	MASTER LOAD DOOR LATCHING BRACKET
91057	RIVET 3/16" (USED TO INSTALL MASTER LOAD DOOR LATCHING BRACKET – USES 2 TOTAL)
64246	MASTER LOAD RELEASE HANDLE
64253	SPACER (USED TO INSTALL MASTER LOAD RELEASE HANDLE - USES 2 TOTAL)
64247	SCREW 8-32 X .75" (USED TO INSTALL MASTER LOAD RELEASE HANDLE - USES 2 TOTAL)
K91035	HOOK KIT W/ HARDWARE

† FINISHES

POSTAL GREY FLAT
SANDSTONE PEBBLE
WHITE PEBBLE
DARK BRONZE PEBBLE
FOREST GREEN PEBBLE
BLACK PEBBLE
OTHER: PLEASE SPECIFY