
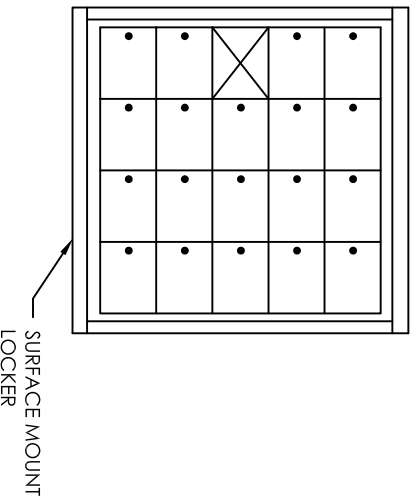


MINI STORAGE LOCKER SURFACE MOUNT INSTALLATION INSTRUCTIONS

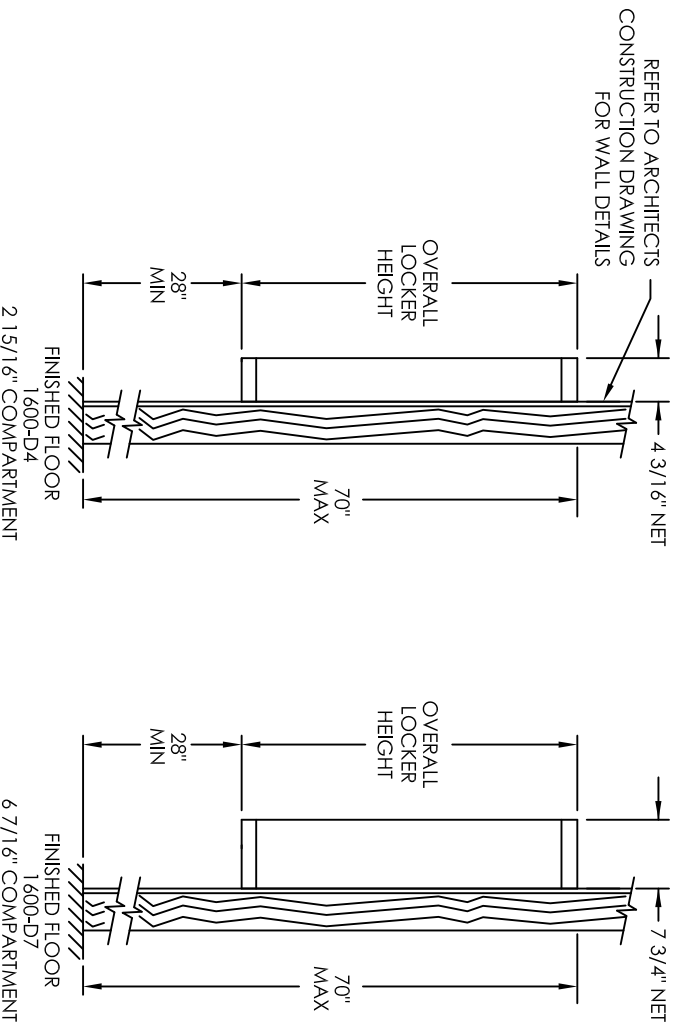

- MOUNTING HARDWARE:**
- (4) #8 X 2.00" PAN HEAD (T20 DRIVE) WOOD SCREWS (64225)
 - (4) 1.00" OD FENDER WASHERS (56250)

- INSTALLATION NOTES:**
1. BEFORE MOUNTING THE BOX WITH ATTACHED COLLAR ASSEMBLY TO THE WALL, YOU MUST FIRST DRILL (4) HOLES IN THE BACK OF THE LOCKER. ENSURE THE DISTANCE BETWEEN THE HOLES MATCHES THE DISTANCE BETWEEN THE STUDS THAT YOU ARE USING TO MOUNT THE ASSEMBLY TO THE WALL.
 2. POSITION UNIT SUCH THAT IT CAN BE FASTENED TO AS MANY STUDS AS POSSIBLE.
 3. PLACE THE LOCKER UNIT AGAINST THE WALL AND ENSURE IT IS LEVEL BEFORE MOUNTING.
 4. USE THE PROVIDED #8 WOOD SCREWS (64225) AND THE FENDER WASHERS (56250) TO SECURE THE ASSEMBLY TO THE WALL.*

* FOR ALL UNCONVENTIONAL LUMBER INSTALLATION METHODS, HARDWARE MUST BE PROVIDED BY THE CUSTOMER.

PRODUCT SERIES:
INSTALLATION INSTRUCTIONS MINI STORAGE LOCKER SURFACE MOUNT

		MODEL	D4 & D7	REV	A
		SCALE	NONE	LAST REV DATE	2/21/2011
5935 Corporate Drive • Manhattan, KS 66503 www.florencemailboxes.com • (800) 275-1747 A GIBRALTAR INDUSTRIES COMPANY		DRAWING NUMBER	MINI-DSMINS	DRAWN BY	NBC