
## vogue™ Classic Series - Pillar Pedestal Cover

Assembly Instructions


These instructions assume that you have already properly installed the vital™ Cluster Box Unit (CBU). If the CBU has not yet been installed, please refer to the instructions that came with the vital™ CBU.


For all CBU Types:
Slide the pedestal base cover around the pedestal (pedestal cover base opening should be installed to the back of the CBU unit). Install pedestal base cover using #8 flat head self tapping screws.

- Attach the pillar pedestal cover onto the CBU post as shown using four of the #10 pan head self tapping screws.
- After the pillar pedestal cover is installed, slide cover plates over the top of the pedestal cover. Dimples found on cover plates should face up. Tabs on the cover plates should engage with the tops of pillar pedestal covers.

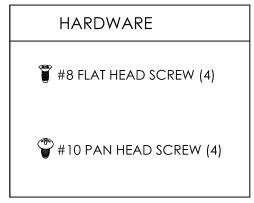



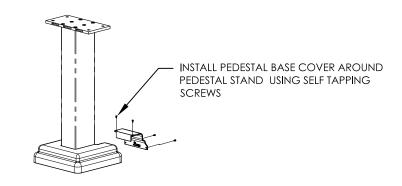

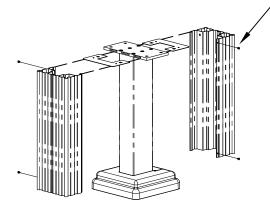

INSTALL PILLAR PEDESTAL COVER COLUMN AROUND PEDESTAL STAND USING SELF TAPPING SCREWS

CBU & PEDESTAL MUST BE
ASSEMBLED & FULLY INSTALLED
PRIOR TO ADDING
ACCESSORIES


\* CBU UNIT NOT SHOWN FOR CLARITY.

PRODUCT SERIES: VOGUE<sup>TM</sup> CLASSIC SERIES - PILLAR PEDESTAL COVER



5935 Corporate Drive • Manhattan, KS 66503 800 275 1747 • www florencemailboxes com

MODEL	MODEL PILL PED		В
SCALE	NONE	LAS	t rev date 1/27/2017
DRAW	NG NUMBER		DRAWN BY
	91549		NBC

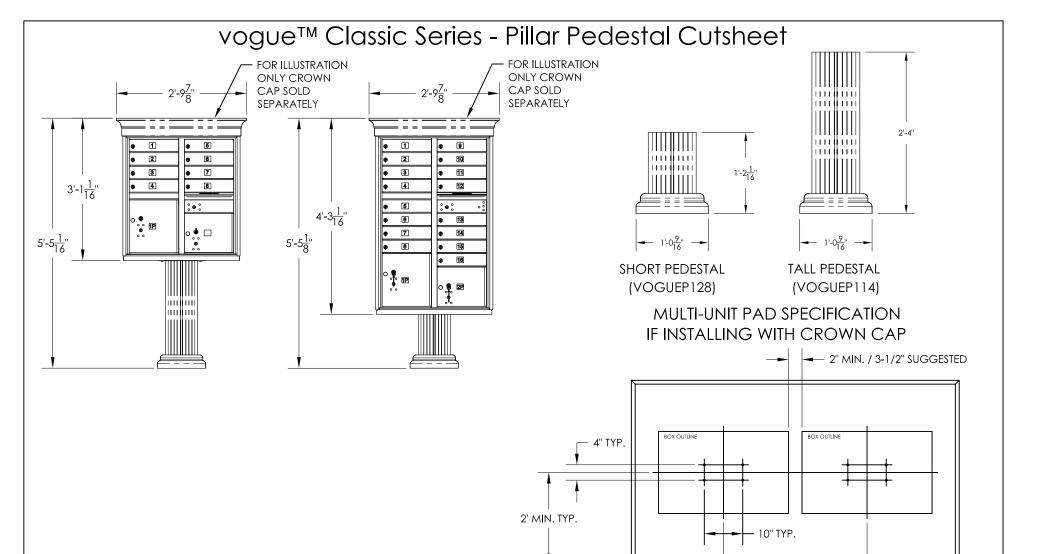

## NOTES:

- 1. CBU & PEDESTAL MUST BE ASSEMBLED AND FULLY INSTALLED PRIOR TO ADDING ACCESSORIES.
- 2. CLASSIC PEDESTAL COVER AND CAP SOLD SEPARATELY.
- 3. AVAILABLE IN ALL STANDARD CBU POWDER COAT FINISHES.
- 4. PEDESTAL COVER INSTALLED USING SELF-TAPPING SCREWS (INCLUDED).
- 5. PEDESTAL BASE COVER DESIGNED TO FIT OVER FLORENCE 1570 SERIES CBU PEDESTAL.



3'-1<sup>3</sup>" TYP

## FLORENCE **ECORPORATION**

2' MIN. TYP.→

5935 Corporate Drive • Manhattan, KS 66503 800 275 1747 • www florencemailboxes com

MODEL PILLAR		REV	В
SCALE	NONE	LAS	<b>t rev date</b> 2/20/2017
DRAWING	NUMBER		DRAWN BY
	91549		NBC